




Abtech EX3 Series Modular Exterior Buildings are prefabricated for simple on site assembly. Buildings can be designed as single or multi-level systems.

The Modular Exterior Buildings provide the “End-User” with a Modular System which serves to control the working environment in any setting, such as a warehouse, manufacturing plant, or job sites with an environment suitable for the administration of business. They can be designed as an open area unit, or with interior walls to separate personal work space from a main office area. Partitions can also be provided. Aesthetically pleasing as well as functional, our Exterior Buildings are manufactured to create or augment any space so your business makes the impression you want it to.

Single Level Buildings

model#	nominal size	model#	nominal size
EX3-888	8'6"X8'6"	EX3-12128	12'6"X12'6"
EX3-8108	8'6"X10'6"	EX3-12148	12'6"X14'6"
EX3-8128	8'6"X12'6"	EX3-12168	12'6"X16'6"
EX3-10108	10'6"X10'6"	EX3-12188	12'6"X18'6"
EX3-10128	10'6"X12'6"	EX3-12208	12'6"X20'6"
EX3-10148	10'6"X14'6"	EX3-16168	16'6"X16'6"
EX3-10168	10'6"X16'6"	EX3-16188	16'6"X18'6"
EX3-10188	10'6"X18'6"	EX3-16208	16'6"X20'6"
EX3-10208	10'6"X20'6"	EX3-20208	20'6"X20'6"

Specify All Desired Custom Changes At The Time Of Ordering. EX3 Standard Height is 8'. If Necessary, Custom Heights Are Available.

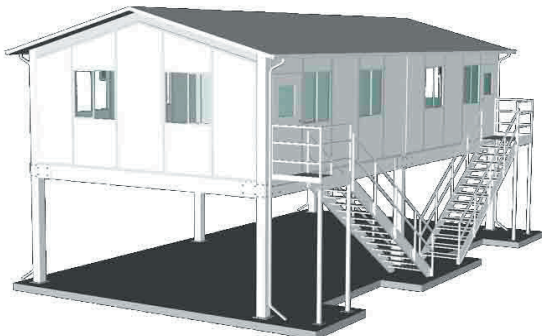

SPECIFICATIONS:

PANELS:

The panels are nominal 3-inch thick with standard sizes from four feet wide by eight feet tall to four feet wide by ten feet tall. Custom heights over ten feet are also available. Panel construction varies over a wide range. Standard **Metal wall panels** will have either Embossed 26 ga. prepainted steel or .019 prepainted aluminum skins laminated to 1/8" tempered hardboard both sides of honeycomb or expanded polystyrene foam core. Many more custom panel configurations are available.

POSTS:

Posts are to be of four-piece design to form a non-progressive wall system. **Cavity of posts will allow use of approved steel electrical boxes that are now required by building codes.** Posts shall also act as raceways for phone lines, data lines, and other electrical lines. The structural elements of the posts shall be connected by machine bolts and nuts no more than 18" center line. All extrusions shall be 6063-T5 aluminum, minimum .062 thickness, with a clear anodized finish.

CORNER POSTS:

Corner posts will be 3" x 3" Steel Tube welded to Structural Steel Channel base frame.

BASE CHANNEL:

Base channel provides support for wall panels and posts while allowing space for anchors or post uplift connectors. Its low profile design is aesthetically pleasing and eliminates the need for additional base molding. Material shall be 6063-T5 aluminum, minimum .062 thick, and clear anodized finish.

CAPPING CHANNEL:

Capping channel acts as a support for vertical deck loads in addition to serving as a continuous diaphragm member. Material is 6063-T5 aluminum, minimum .062 thickness, and clear anodized finish.

DOORS:

Doors will be 1 3/4" thick and **standard 42" wide** by 80" tall to accommodate equipment or furniture. Door material will match wall panels and be framed in an aluminum channel for heavy traffic areas. Door jamb is a heavy duty extrusion. All doors are factory prehung with hinges and door lockset. Windows are 2' x 2' with 1/4" tempered safety glass. Extrusions are 6063-T5 aluminum, minimum .062 thickness, with clear anodized finish.

WINDOWS:

Standard fixed windows are 44" wide by 40" tall with 3/16" tempered safety glass installed in aluminum frame. Window units are completely modular. Horizontal sliding and pass thru windows can also be provided. Frames are 6063-T5 aluminum, .062 minimum thickness, with clear anodized finish.

ROOF SYSTEM:

Standard Panelized Gable Roof with 3 in 12 slope, panels are steel faced with foam core. Optional: Rubber Roofing and Formed Metal Roof systems.

CEILING SYSTEM:

Optional heavy duty white enameled steel T-BAR hung from roof by 12 ga. galvanized ceiling wire and self tapping sheet metal screws. Ceiling tiles are 2' x 4', 5/8" thick, Mineralboard. Additional R-19 insulation is optional.

FLOOR:

Standard 1 1/2", 22 GA. galvanized decking, 1 1/8" T & G Plywood with 12" x 12" x 1/8" vinyl tile. Optional Steel or Aluminum Diamond Plate or carpet

ELECTRICAL:

Surface Mount Fluorescent light fixtures are 2' X 4', 4-TUBE, 120v, less tubes. Duplex outlets and light switches, 120v, with approved electrical box and post prep. Sub panel and breakers.

HVAC:

Thru wall systems or central air systems are available. Consult factory for design assistance.

Specifications are subject to change without notice.